

Maintenance Intervals on Becker O 5.4/6/8 Series Pumps

*Every Day

*Check oil level and visually check for discoloration/contamination of the oil (E.1)

*First 100 Hours

*Change Oil (E.2)

*Every 40 to 200 Hours

*Check and clean air intake filter. Every 4 filter cleanings a new filter should be installed and minimally every year. (G)

*Blow dust and debris off outside of pump. (C)

*Every 500-1000 Hours

*Change oil (E.2)

*Every 1000 Hours or at least 2 times per year

*Replace oil separation element. (F)

(x.x) Refers to pictures in operating instructions.

**These intervals are basic guidelines. You may find either more or less frequent attention is needed, depending on your application.*

MAINTENANCE KIT O 5.4 P/N 338154M0000

MAINTENANCE KIT O 5.6 P/N 338156M0000

MAINTENANCE KIT O 5.8 P/N 338158M0000