

Maintenance Intervals on Becker U 4.20/40 Series Pumps

*Every Day

*Check oil level and visually check for discoloration/contamination of the oil (C)

*First 100 Hours

*Change Oil (E.1)

*Every 40 to 200 Hours

*Check and clean air intake filter. Every 4 filter cleanings a new filter should be installed and minimally every year. (G)

*Blow dust and debris off outside of pump. (D)

*Every 500-1000 Hours

*Change oil (E.2)

*Every 2000 Hours or at least 2 times per year

*Replace oil separation element. (I & J)

(x.x) Refers to pictures in operating instructions.

**These intervals are basic guidelines. You may find either more or less frequent attention is needed, depending on your application.*

MAINTENANCE KIT U 4.20 P/N 338056M0000

MAINTENANCE KIT U 4.40 P/N 338057M0000